

# Quik-Gard™ Delineator



HIGH PERFORMANCE GUARDRAIL DELINEATION

“Patented Notch” design provides vertical and horizontal alignment for fast, easy installation.

Quik-Gard is manufactured from durable, flexible, high-density polyethylene plastic with UV stabilizers.

Retroreflective sheeting meets all state and federal specifications, and is available in Hi-Intensity and Fluorescent grades.

Quik-Gard accepts sheeting on one or both sides.

Quik-Gard sheeting is available in white, for right side delineation, yellow, for left side, or red for wrong-way applications.

US Patent No. 6,733,205 B2

## Several Guardrail Delineator Sizes Available:



3" x 4"  
reflective area  
Delineator "I"




4" x 6½"  
reflective area  
Delineator "L"



4" x 13"  
reflective area  
Delineator "T"



L-type shown above: 4" x 6½" white reflective area.

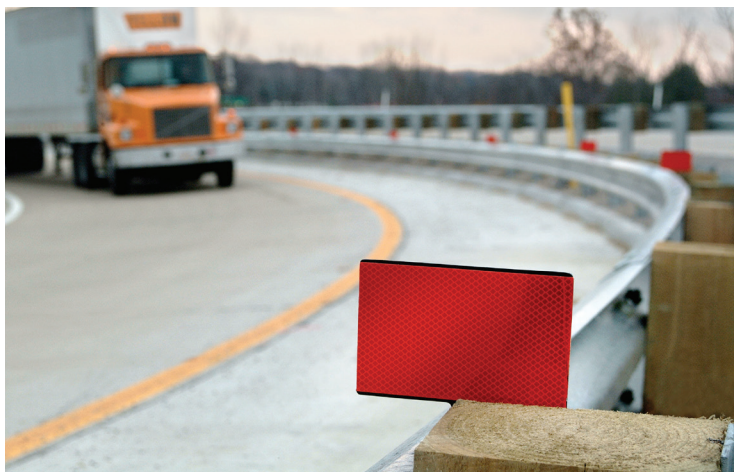

L-type shown above: 4" x 6½" red reflective area, warning of wrong-way direction.

Installs on wood, steel or plastic spacer beams with nails, screws or glue.

Sheeting on both sides provides clear delineation for entrance/exit ramps.

Larger reflective surface provides greater delineation, as referenced in FHWA "Elderly Driver Report".

### Applications:

- Dangerous Curves/Intersections
- Entrance/Exit Ramps
- High Speed Areas
- Low Visibility Areas
- Work Zones
- Wrong-Way Areas

# Quik-Gard™ Delineator



## INSTALLATION INSTRUCTIONS

**Quik-Gard is designed to mount behind the guardrail, affixed to the guardrail post or spacer block, with a minimum of two mechanical fasteners. (See Illustration right)**

Place Quik-Gard against guardrail post or spacer block. Align Quik-Gard notch to the top of the guardrail itself.

Attach Quik-Gard to post or spacer:

Use two 1.5"x #6 (minimum) galvanized, wood screws, with washers. Drill directly through the leg portion of Quik-Gard, about 3/4" to the left of the positioning holes.

### **NAIL GUN INSTALLATION (Wood Only):**

Use a minimum of two nails, 2" long, with washer heads, or supported with washers. Drive nails directly through the leg portion of Quik-Gard, about 3/4" to the left of the positioning holes.

